

SEISMOGRAPH


Quick Start Guide (B)

SMDA (v7.0)

Table of Contents

1. Main Window	2
2. Menu Bar	6
3. Artificial Accelerogram Tool	9
4. Match Tool	9
5. Clean-Up Tool	11
6. Run Settings	13
7. Spectrum Settings	15
8. Record Comparison Tool	16
9. Design Spectrum Tool	19
10. Response Spectrum Tool	21
10.1 Review Elastic Spectra.....	22
10.2 Review Inelastic Spectra	23
11. SDOF Tool	24
11.1 Damping Tool	27
11.2 Add Function	29
11.3 Merge Functions	30
11.4 Add Envelope	31
12. Edit Table Data	32
13. Duration & Trim Tool	33
14. MCR Settings	34

1. Main Window

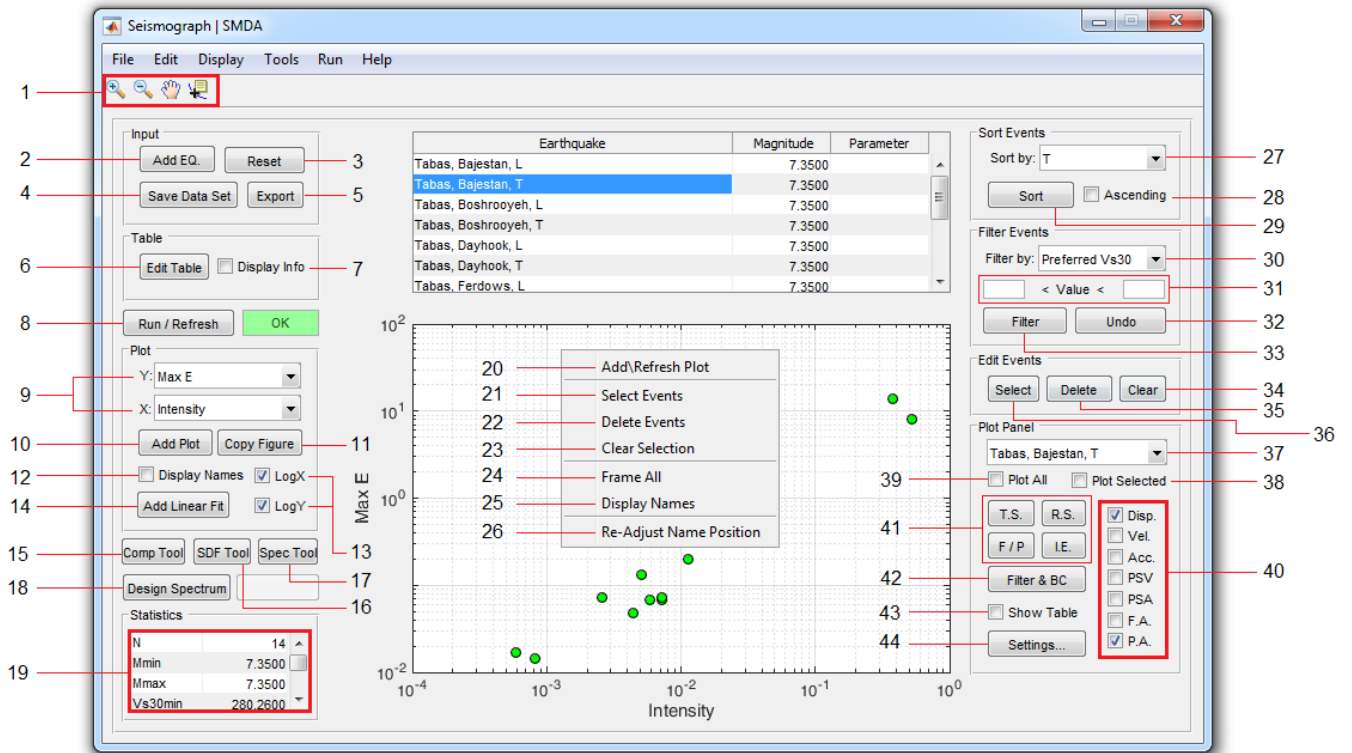

1. Main Toolbar, including the following tools:
 1. **Zoom in**
 2. **Zoom out**
 3. **Pan**
 4. **Datacursormode** (enables selecting a point on the plot and opens a data tip displaying its coordinates)
2. Add new record¹(s) to the current database.
3. Create a new project.
4. Save current database as new file. (*.sed)
5. Save selected records from the table to text file (*.txt). Filenames will be automatically determined using the earthquake name and the record station.
6. Use this button to view and edit all record's information in a table.
7. Enable this checkbox to see all available information for the selected record in a panel on the right-side of the main window:

¹ Available File Formats: *.sed / *.txt / *.dat / *.AT2 / *.NS / *.EW / *.UD / *.ASC / *.mat

Click on any parameter from this list to display it in the main table. (selected parameter is replaced with the third column of the table.)

Depth	Depth of earthquake
Vs30	Average shear wave velocity at the upper 30-m depth
Ep. Dist.	Distance from the recording site to the epicenter
Hp. Dist.	Distance from the recording site to the hypocenter.
PGA	Peak acceleration of ground motion
PGV	Peak velocity of ground motion
PGD	Peak displacement of ground motion
Power	Area of the PSD Function
Intensity	Maximum of the PSD Function
FA Area	Area of the Fourier Amplitude
Amax	Maximum of the Fourier Amplitude
Ca	$\int_{-\infty}^{\infty} a(t)^2 dt$
Vmax	Maximum of the Fourier Amplitude for Velocity
Cv	$\int_{-\infty}^{\infty} v(t)^2 dt$
Max E	Maximum of total input energy per unit mass
T	The period at which Max E occurs
Max Et	Maximum credible total input energy
Tt	The period at which Max Et occurs
Duration	Total duration
U Duration	Uniform duration
B Duration	Bracketed duration
S Duration	Significant duration
S/s Ratio	The ratio of the area below the PSDF to its maximum value (which is an indicative of the frequency range)
Et/E Ratio	The ratio of the maximum possible value of the energy to its maximum actual value
Tt/T Ratio	-
PGV/PGA	-
Arias Intensity	$\frac{\pi}{2g} \int_{-\infty}^{\infty} a(t)^2 dt$

Parameter	Value	Unit
Depth	5.75	km
Vs30	324.57	m/s
Ep. Dist.	74.66	km
Hp. Dist.	74.88	km
PGA	0.10553	g
PGV	13.298	cm/s
PGD	7.633	cm
Power	0.11527	
Intensity	0.011224	
FA Area	3.5287	m/s ²
Amax	1.039	m/s
Ca	1.7643	m ² /s ³
Vmax	0.43597	m
Cv	0.050566	m ² /s
Max E	0.20152	m ² /s ²
T	0.5	s
Max Et	0.51852	m ² /s ²
Tt	2.4073	s
Duration	34.98	s
U Duration	1.6792	s
B Duration	16.42	s
S Duration	19.48	s
S/s Ratio	10.2698	
Et/E Ratio	0.38863	
Tt/T Ratio	0.2077	
PGV/PGA	0.1285	s
Arias Intensity	0.28261	m/s

- Use this button to calculate and store the computational data. When the calculation is completed for all records, the status bar will turn into green. If the computational data is not available for a number of records, the number of these records will appear in the status bar with a minus sign. In this case you can continue the calculation for the same number of records using the Continue option from the Run menu.
- Select the desired quantities for the X and Y axis of the graph from these menus.
- Use this button to add the selected plot (defined in previous step).
- Use this button to make a copy of the current axes in a new figure.

12. Enable this checkbox to display name of the all records on the chart. (If some of the events are selected using options **21** or **36**, only names of those events will be displayed)
13. Enable these checkboxes to use a logarithmic scale for X or Y axis.
14. Use this button to fit a Linear Regression model to the current plot data.
15. Records Comparison Tool
16. SDOF Analysis Tool
17. Response Spectrum Tool
18. Design Spectrum Tool
19. Some statistical information about the database is available in this table. (Including number of records, maximum and minimum magnitudes, maximum and minimum shear wave velocity, and maximum and minimum hypocentral distance)


*Right-click menu


20. Add plot using the selected quantities for the X and Y data (same as button **10**)
21. Select records on the chart
22. Delete selected records
23. Clear current selection
24. Frame all data in the chart (After zooming in, you can use this option to return to full view)
25. Display name of all (or selected) records on the chart. (same as checkbox **12**)
26. Re-adjust the position of record's names


27. To sort the table data, you need to select the desired quantity from the list. (Selecting any parameter from this list will replace it in the third column of the main table)
28. Enable this checkbox to sort the table data (by the selected quantity) in ascending order.
29. If checkbox **28** is disabled, this button will sort the table data in descending order. (default order)


30. To filter the table data, you need to select the desired quantity from this list. (Selecting any parameter from this list will replace it in the third column of the main table)
31. Enter the range of the desired quantity in these fields. (**Note:** Cannot filter by non-numeric quantities)
32. Use this button to restore filtered data.
33. Use this button to apply the filter. (**Note:** It is not possible to sort filtered data. If needed, sort before filtering.)
34. This button is used to clear the current selection.
35. Use this button to permanently delete selected records from the chart. (as well as from the table)
36. Use this button to select records on the chart.
37. Name of the selected record (when only one record is selected from the table) is displayed here.
38. If this checkbox is enabled, functions of the section **41** will be plotted for all selected records. You can select desired records from the table or select them on the chart. (**Note:** To avoid graphic issues, limit the number of selected records to 20)
39. If this checkbox is enabled, the selected function will be plotted for all available records. (**Note:** To avoid graphic issues, the function will be plotted only for the first 20 records)
40. Enable the desired functions ($S_d/S_v/S_a/PS_v/PS_a$ & Fourier/Power Amplitude) to be plotted using the buttons of section **41**.
41. Use the buttons in this section to calculate and display the Acceleration, Velocity and Displacement time histories / Response Spectra / Fourier Amplitude and Power Spectrum (PSDF) / and input energy per unit mass.
42. Filtering and Baseline Correction Tool
43. If this checkbox is enabled, the data corresponding to each function of the section **41** will also be displayed in a table. By displaying the table, its data will be automatically copied to the clipboard. (**Auto Copy** feature)
44. Use this button to change the calculation settings for the functions of section **41**.


2. Menu Bar

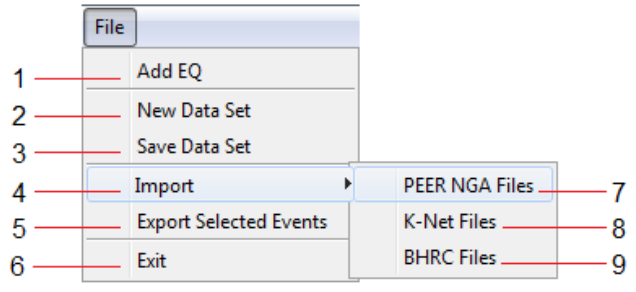
File	
	
<ol style="list-style-type: none"> 1. Add new record(s) to current database 2. Create a new project 3. Save current database as a new file (*.sed) 4. Import multiple records from PEER, K-Net or BHRC database 5. Save the selected records <u>from the table</u> to text files (*.txt) 6. Exit the application 	
Import	
<ol style="list-style-type: none"> 1. PEER Acceleration file (*.AT2) 2. K-Net Records (*.NS / *.EW) 3. BHRC files (*.ASC) 	

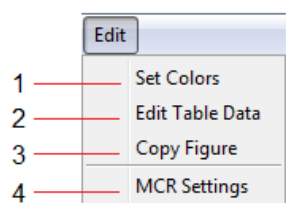Edit	
<ol style="list-style-type: none"> 1. Assign custom color to different magnitudes in the database 2. View and edit all records' information in a table 3. Copy current axes to a new figure 4. Access to MATLAB Runtime settings 	

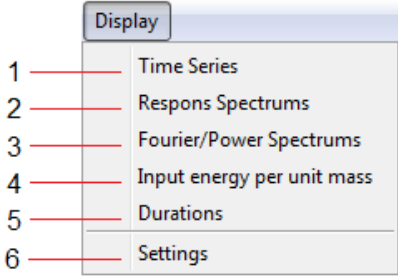
Display	
<ol style="list-style-type: none"> 1. Display the Acceleration, Velocity, and Displacement time histories 2. Display the various Response Spectra ($S_d/S_v/S_a/PS_v/PS_a$) 3. Display Fourier amplitude and power spectra 4. Display the input energy per unit mass 5. Duration Tool (to determine the various durations of the ground motion) 6. Access to the calculation settings for the above functions 	

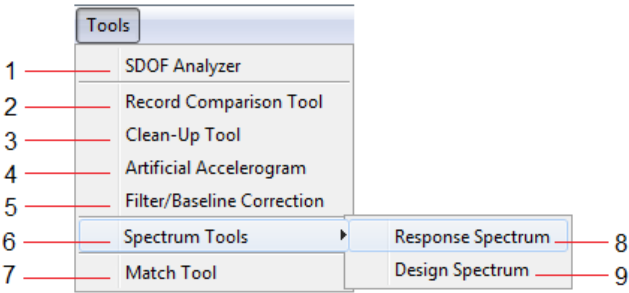Tools	
	
<ol style="list-style-type: none"> 1. SDOF Tool (dynamic analysis of SDF systems) 2. Record Comparison Tool 3. Records Clean-Up Tool (remove initial Rest time) 4. Artificial Earthquake Tool (synthetic accelerogram generator) 5. Filtering and Baseline Correction Tool 6. Spectrum Tools 7. Spectral Matching Tool 	
Spectrum Tools	
<ol style="list-style-type: none"> 8. Response Spectrum Tool 9. Design Spectrum Tool 	

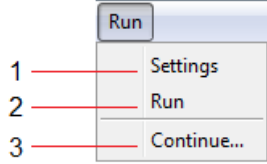Run	
<ol style="list-style-type: none"> 1. Access to the Run settings 2. Calculate the computational data for all records 3. Calculate the computational data only for the remaining records 	


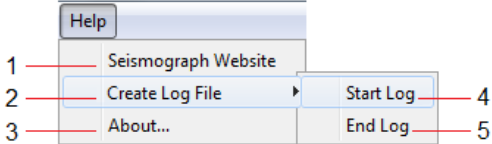
Help	
<ol style="list-style-type: none"> 1. Visit the product page on the website 2. Create a Log file for bug report 3. View description of the current version of the software 	
Create Log file	
<ol style="list-style-type: none"> 1. Start writing the Log file 2. Stop writing the Log file (it is saved the in the software's installation folder). 	

3. Artificial Accelerogram Tool

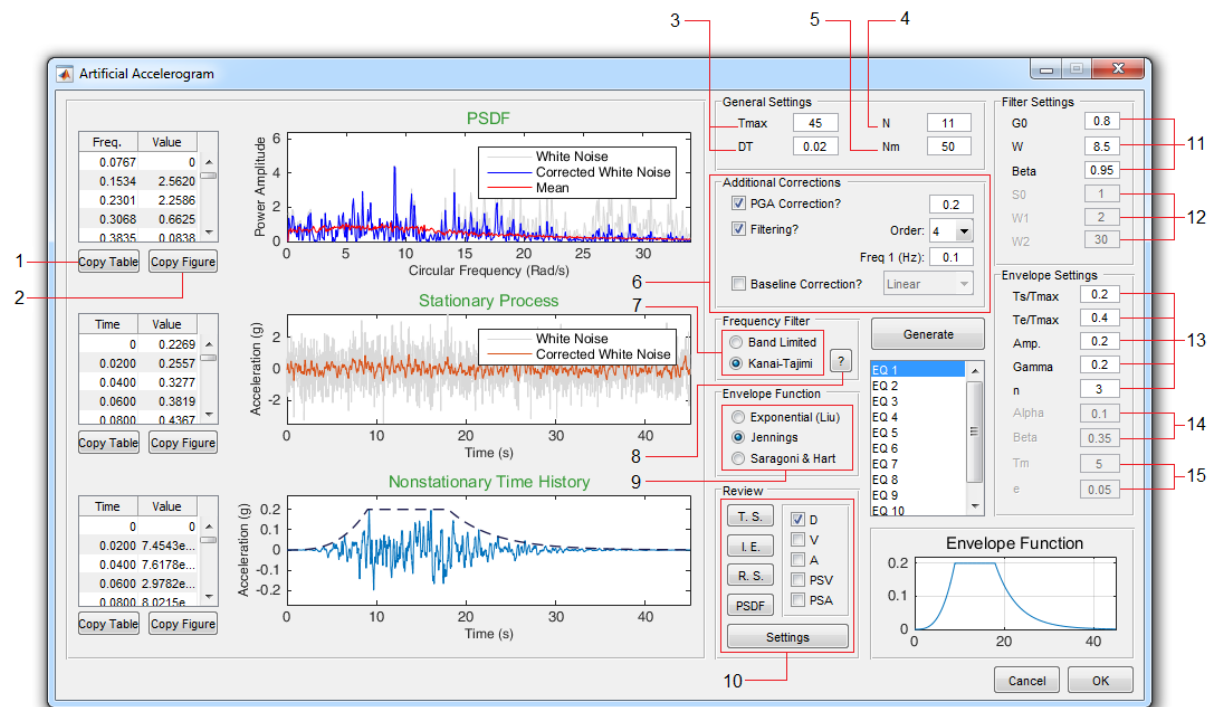


1. Copy table data into the clipboard.
2. Use this button to make a copy of the axes corresponding to this table in a new figure.
3. Duration and time step of the synthetic accelerogram.
4. Number of required artificial accelerograms to be generated.
5. Number of records for calculating Mean of the PSD Function for the synthetic accelerogram. (it is displayed on the first chart in red color)
6. To apply additional corrections (PGA Correction, Highpass Filtering and Baseline Correction) just enable its checkbox from this section.
7. Select the type of frequency filter.
8. Use this button to determine parameters of Kanai-Tajimi filter in accordance with a target spectrum.
9. Select the type of envelope function.
10. Use this section to review results and plot various response diagrams for selected Accelerogram. (Including: Time Series, Input Energy, Response Spectra and Power spectrum)
11. Kanai-Tajimi filter parameters. (ω and β are the parameters of the overlaying soil deposits and G_0 is the constant spectral intensity of the rock motions.)

12. Band-limited filter parameters. (S_0 is the constant spectral intensity and ω_1 and ω_2 are the bounding frequencies over which the frequency content has non-zero value.)
13. Define parameters for Jennings envelope Function.
14. Define parameters for Exponential envelope Function.
15. Define parameters for Saragoni & Hart envelope Function.

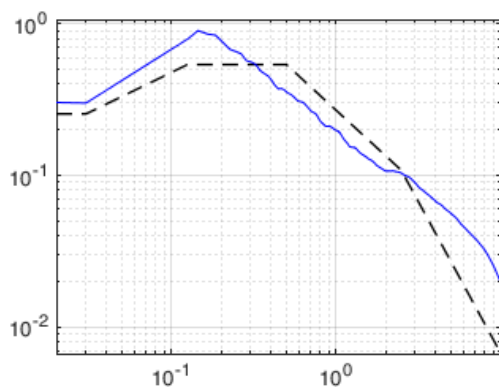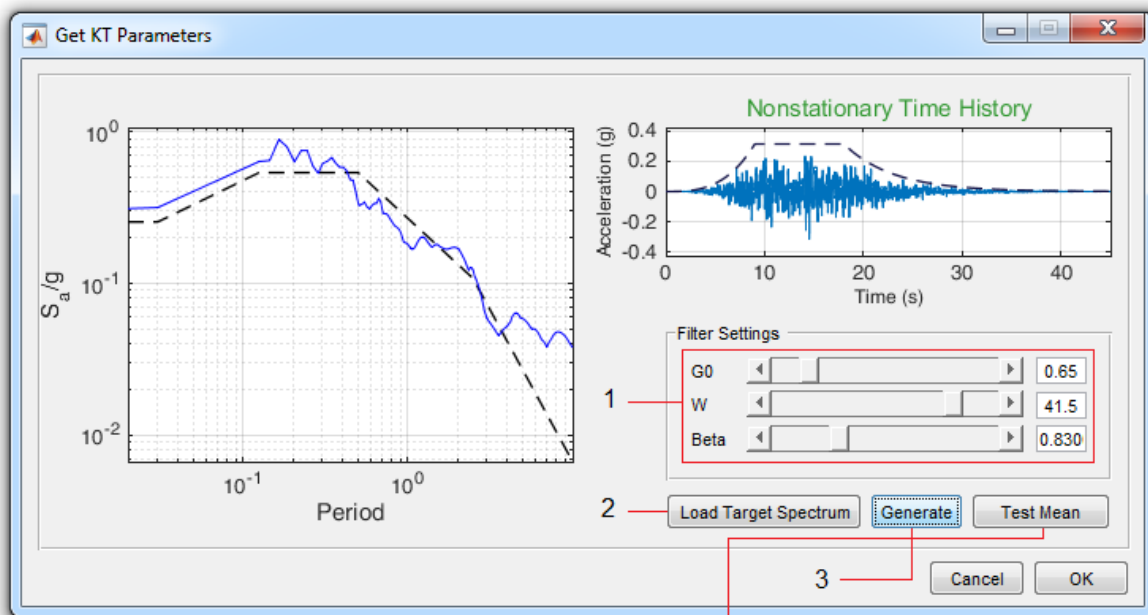


16. Use the sliders to change the parameters so that the resulting spectrum is most consistent with the target spectrum.
17. Use this button to load the target spectrum from a * .txt file.
18. Use this button to create a new accelerogram.
19. Use this button to ensure the average response spectrum matches the target spectrum properly.

4. Match Tool

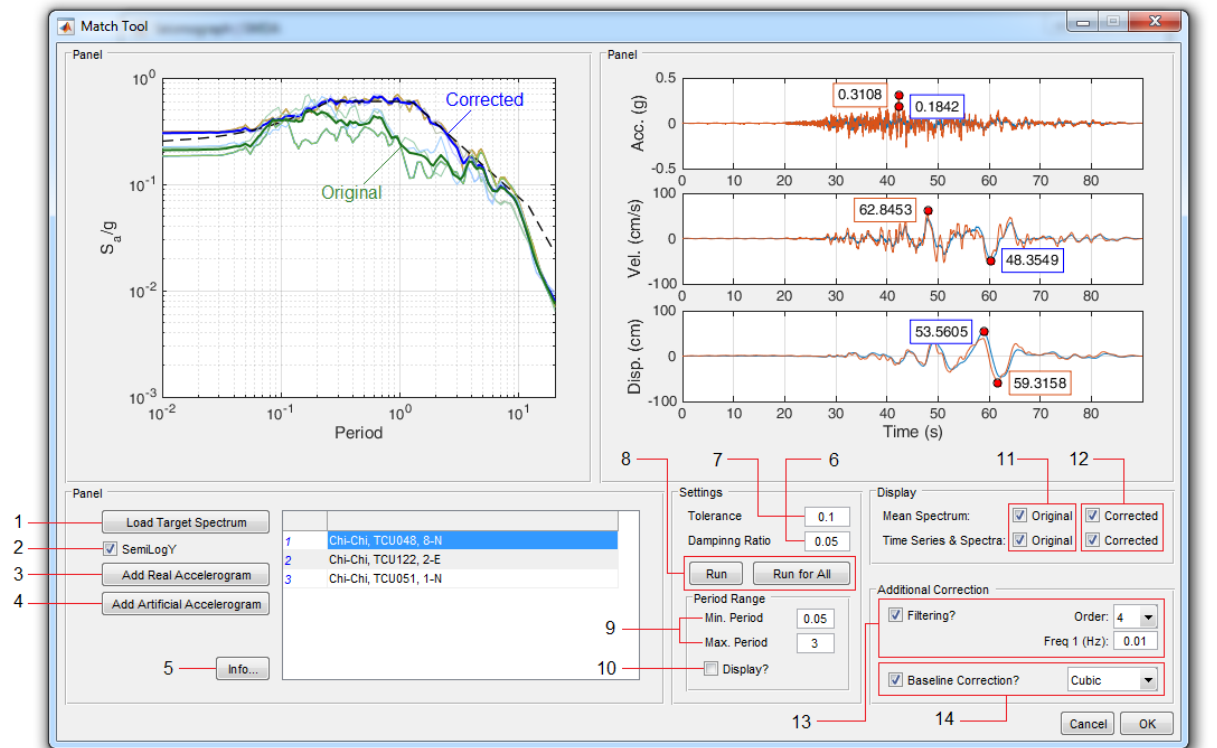


1. Use this button to call the target range from a *.txt file.
2. Use these options to convert graph axes from linear to logarithmic.
3. Use this button to load recorded accelerograms.
4. If the required number of recorded ground motions is not available, use this button to generate simulated ground motions.
5. Use this button to compare the properties of original and modified records.
6. The damping ratio to calculate the response spectrum. (If changed, all response spectra need to be recalculated.)
7. Acceptable tolerances for convergence of response spectra.
8. Use these buttons to apply the spectral matching for the selected record or all records.
9. Enter the Period Range over which the spectral matching should be applied.
10. Enable this checkbox to display the Period Range on the chart.
11. Enable this checkbox to display uncorrected time histories, response spectra and mean spectrum.
12. Enable this checkbox to display corrected time histories, response spectra and mean spectrum.

13. Enable this checkbox to apply the highpass filter to the modified record.
14. Enable this checkbox to apply the baseline correction on the modified record.

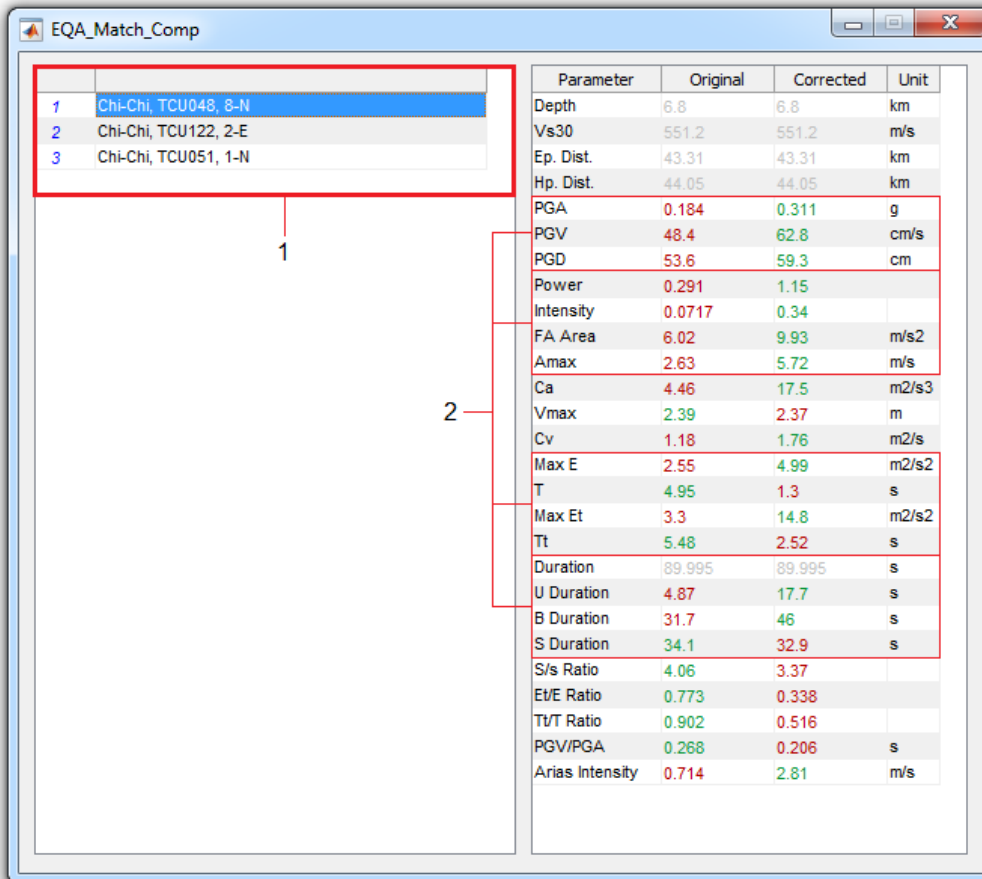


1. Select the desired record from this table. Various parameters for the original and modified record will be shown in the right-hand table. Modified record parameters will be shown in green, red and gray, respectively, if they are increased, decreased or unchanged.
2. Click on each parameter in this section to display the comparison chart for the original and modified record. (Including: acceleration, velocity and displacement time histories / Fourier amplitude spectra and power / energy curve / and different time durations)

5. Clean-Up Tool

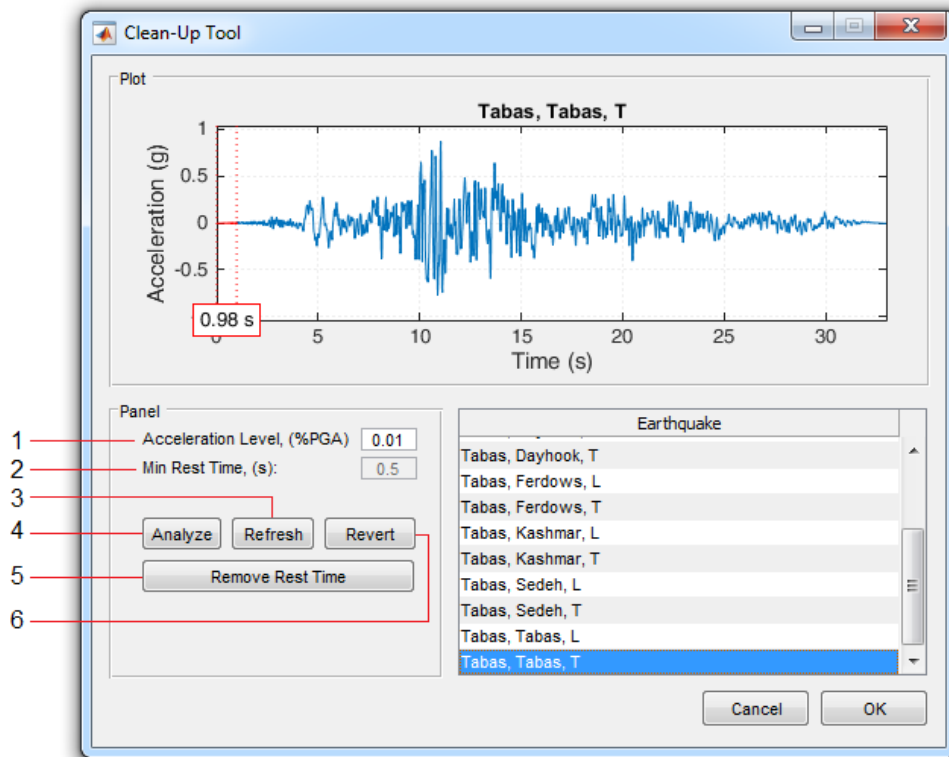

3. Acceleration threshold
4. Minimum duration to preserve before reaching to the acceleration threshold (i.e. the minimum rest time)
5. Use this button recalculate the initial rest time.
6. Use this button to analyze all records and identify the available rest times.
7. Remove initial rest time for the records identified in the previous step.
8. Use this button to undo all changes and restore the original records.

6. Run Settings

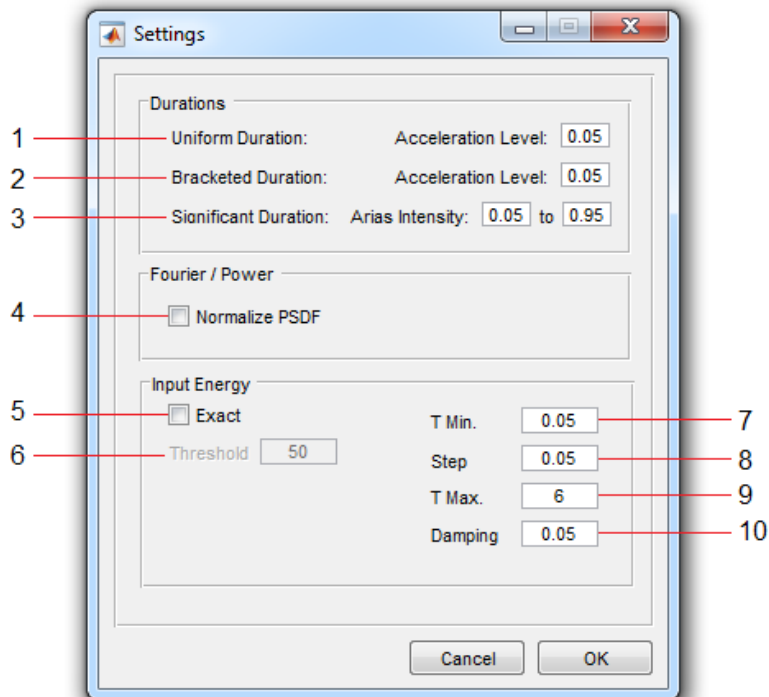


1. The acceleration threshold for calculating the Uniform Duration.
2. The acceleration threshold for calculating the Bracketed Duration.
3. The Arias intensity range for calculating the Significant Duration.
4. Enable this checkbox to use the normalized power spectral density function (with an area equal to 1) to calculate the related quantities.
5. If enabled, the input energy per unit mass for periods beyond the value specified in option **6** is calculate more accurately. (Obviously it takes more time to calculate input energy)
7. Minimum Period
8. Period increment
9. Maximum Period
10. Damping ratio


7. Spectrum Settings

1. Minimum Period
2. Period increment
3. Maximum Period
4. Damping ratio
5. Enable this checkbox to calculate the input energy per unit mass more accurately for periods beyond the value specified in option **6**.

 
7. Determine the X-axis unit for the Fourier Amplitude and Power Spectrum:



8. Enable this checkbox to use the normalized power spectral density function (in which the area under the curve – for positive frequencies – is equal to 1)

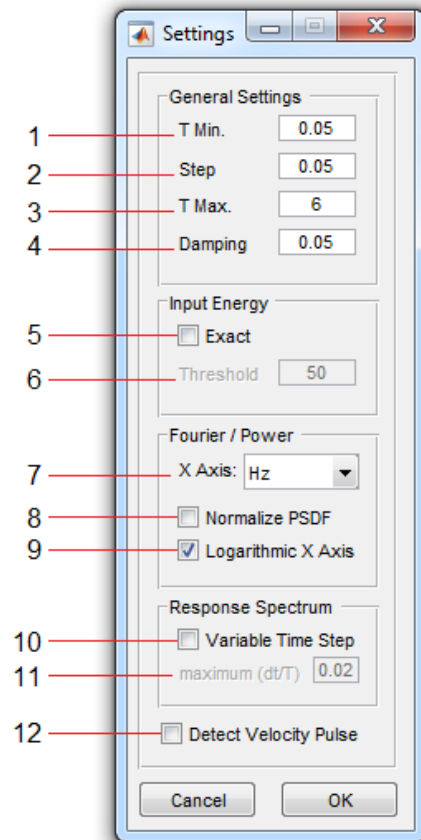


9. Use logarithmic scale for X-axis of the Fourier amplitude and power spectrum
10. Enable the use of variable time step. (more calculation time needed)
11. Maximum value for the ratio of record Time Step to Period (dt/T)
12. If this checkbox is enabled, the velocity pulse – if exists – will be detected on the velocity time history using the NSCV curve. (See Appendix C of NIST GCR Report 11-917-1).

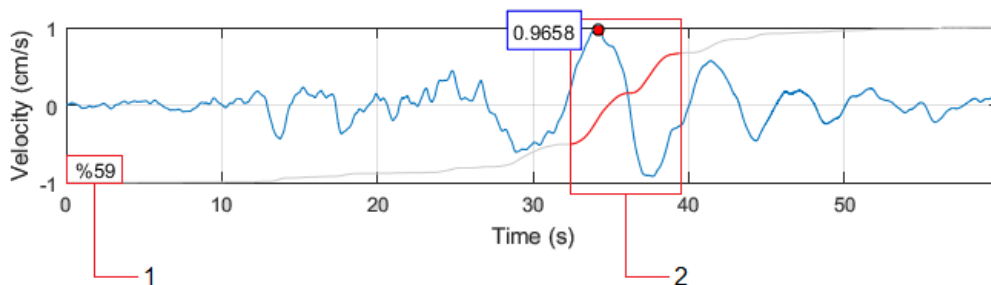

1. Percentage of NSCV changes during the pulse
2. Detected velocity pulse

Note: The method used herein is an approximate method.

8. Record Comparison Tool

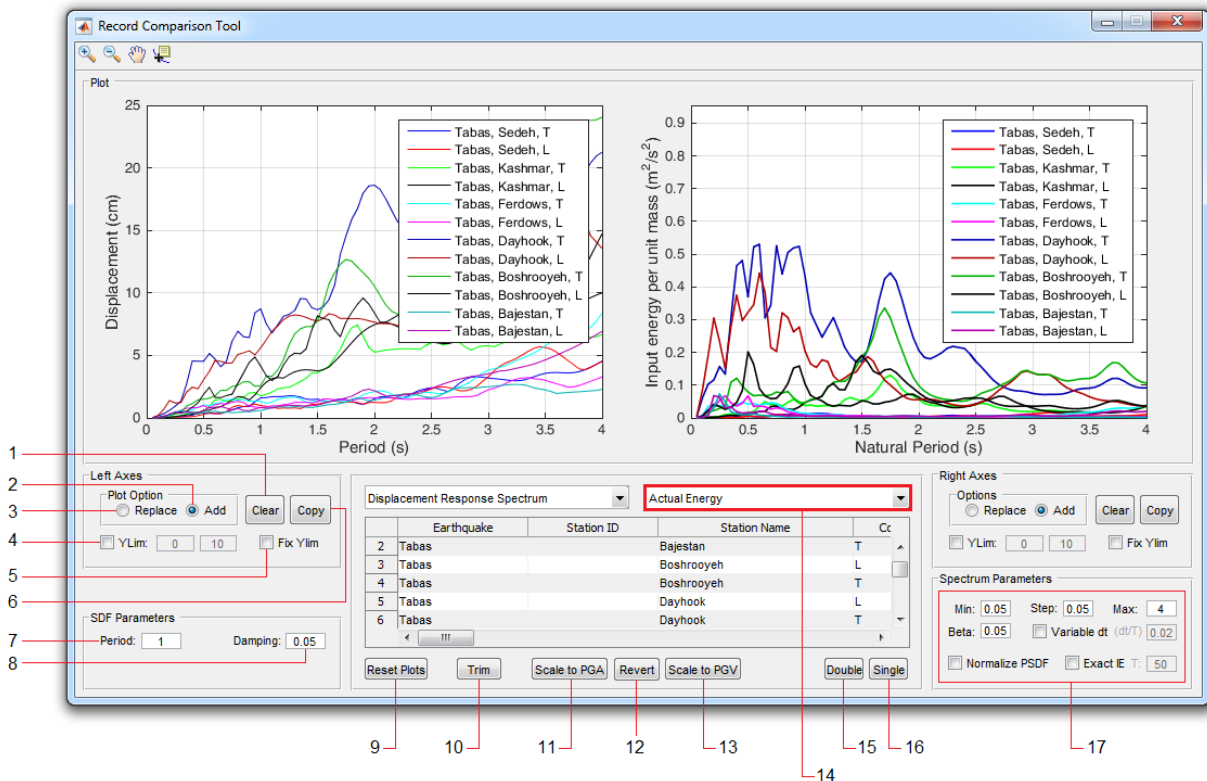


1. Use this button to clear the (left) axes.
2. If enabled, adding next plot to the (left) axes doesn't clear existing plots.
3. Enable this checkbox to replace the existing plots when adding next plot.
4. Use this option to set the Y axis limits.
5. Enable this checkbox to keep a fixed value for the Y axis limits while adding new plots.
6. Use this button to make a copy of the current axes in a new figure.


Note: For the right-hand axes, same options are available from the Right Axes Panel.

7. Period of the SDOF system. (required for response time history calculations)
8. Damping Ratio for the SDOF system.
9. Use this button to clear all plots (both left & right axes)
10. Access to the record trimming tool
11. Use this button to scale records to any specific PGA level.
12. Use this button to restore records to their original state. (after scaling or trimming)


13. Use this button to scale records to any specified PGV level.
14. Select the desired quantity from this menu to plot in the right axes. (The left-hand menu is used for the left axes)

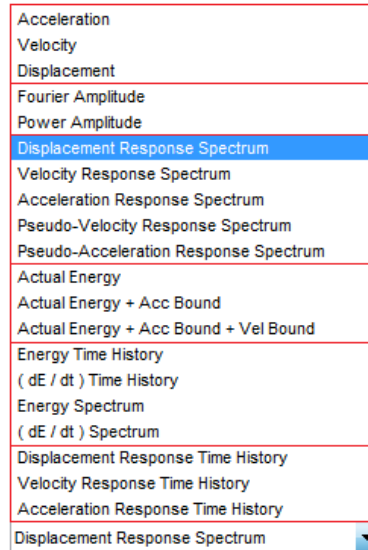

15. This button allows you to use each panel (left or right) independently.

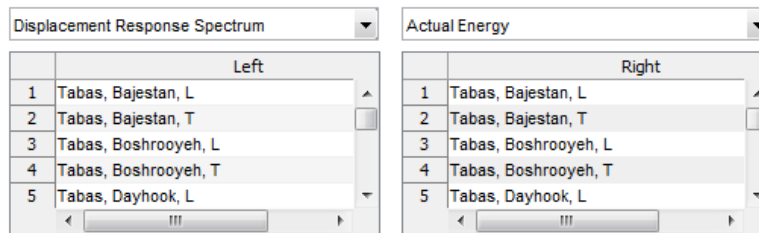


16. Use this button to plot both left and right charts for the selected record at the same time.

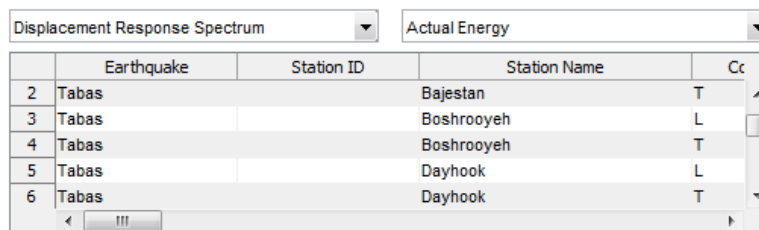

17. This Panel includes the following settings:


1. Period settings (Min, Max, Step size) and Damping Ratio for the response spectrum calculation.
2. Variable time step option and settings. (for the response spectrum calculation)
3. PSDF normalization option.
4. The option to use more accurate method for calculating input energy per unit mass in long-period range.


9. Design Spectrum Tool

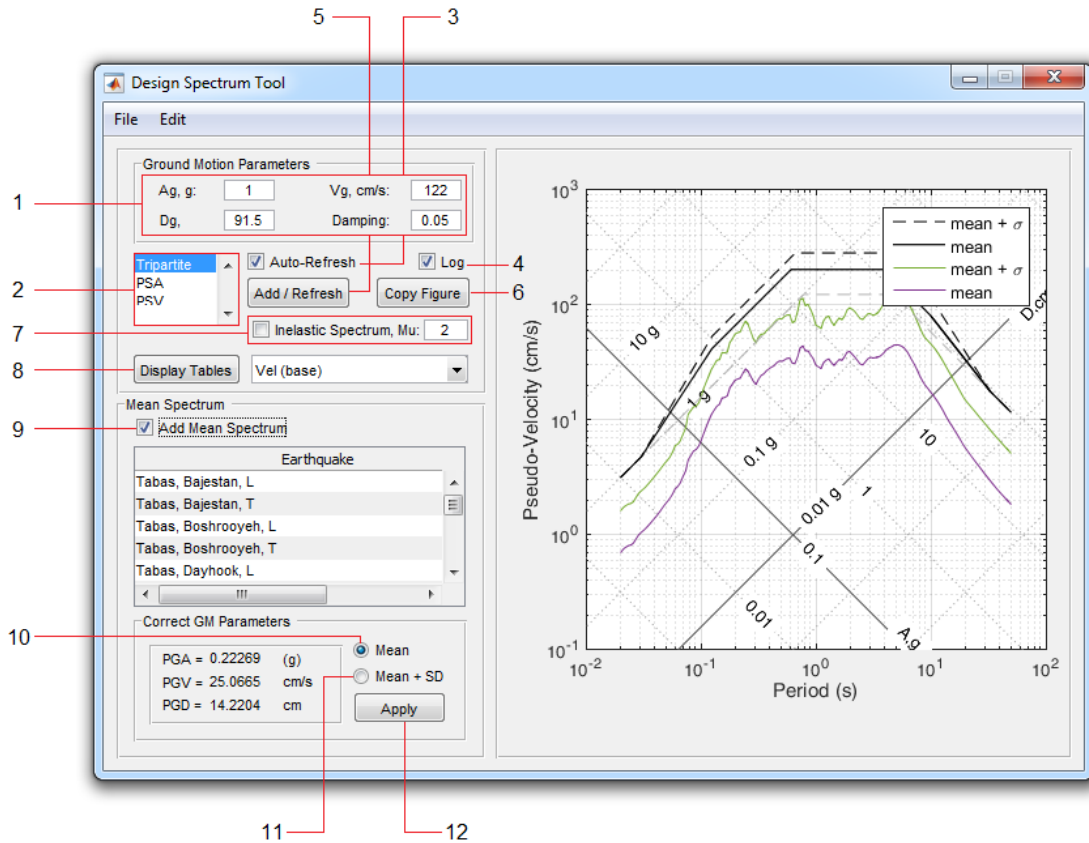


1. Enter the base values for the acceleration, velocity, and displacement as well as the damping ratio. (required for constructing the design spectrum)
2. Use this listbox to select the desired plot to display. (tripartite plot / pseudo-acceleration response spectrum / pseudo-velocity response spectrum)
3. If this checkbox is enabled, by changing any of the base values (of the section **1**) the spectrum will be recalculated and plotted automatically. Otherwise, you need to click the Add/Refresh button (**5**) to calculate and plot the spectrum.
4. Enable this checkbox to use logarithmic scale for X and Y axis.
5. If checkbox **3** is disabled, then you need to use this button to re-calculate the spectrum after editing the base values of the section **1**.
6. Use this button to make a copy of the current axes in a new figure.
7. To add an inelastic response spectrum, enable this option and enter the desired ductility factor. (μ)
8. Use this checkbox to display the spectral data in a table. Select the desired data type from the adjacent menu. By displaying the table, its data will be automatically copied to the clipboard. (**Auto Copy** feature)

9. To construct a Design Spectrum compatible with the available database, enable this checkbox to compute the mean response spectrum for the suite of records.
10. Select this option to calculate the design spectrum compatible with the mean response spectrum of the suite. (and click on the button **12** to apply the changes)
11. Select this option to calculate the design spectrum compatible with the mean-plus-one standard deviation of the suite response spectrum. (and click on the button **12** to apply)

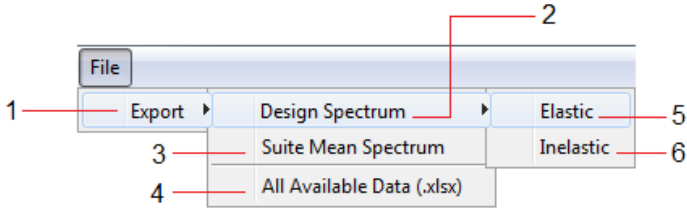File	
	<ol style="list-style-type: none"> 1. Export existing data, including: <ol style="list-style-type: none"> 2. Design spectrum 3. Suite mean spectrum 4. Export all available data to Excel, including: <ul style="list-style-type: none"> • Suite Response Spectrums • S_a (Acceleration Design Spectrum) • S_v (Velocity Design Spectrum)
Export Design Spectrums	
<ol style="list-style-type: none"> 5. Elastic spectrum 6. Inelastic spectrum 	

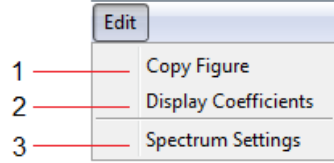Edit	
<ol style="list-style-type: none"> 1. Copy current axes to a new figure 2. Display the <i>Amplification Factors</i> used to calculate the design spectrum 3. Access to response spectrum settings (for the suite response spectrum calculation) 	


10. Response Spectrum Tool

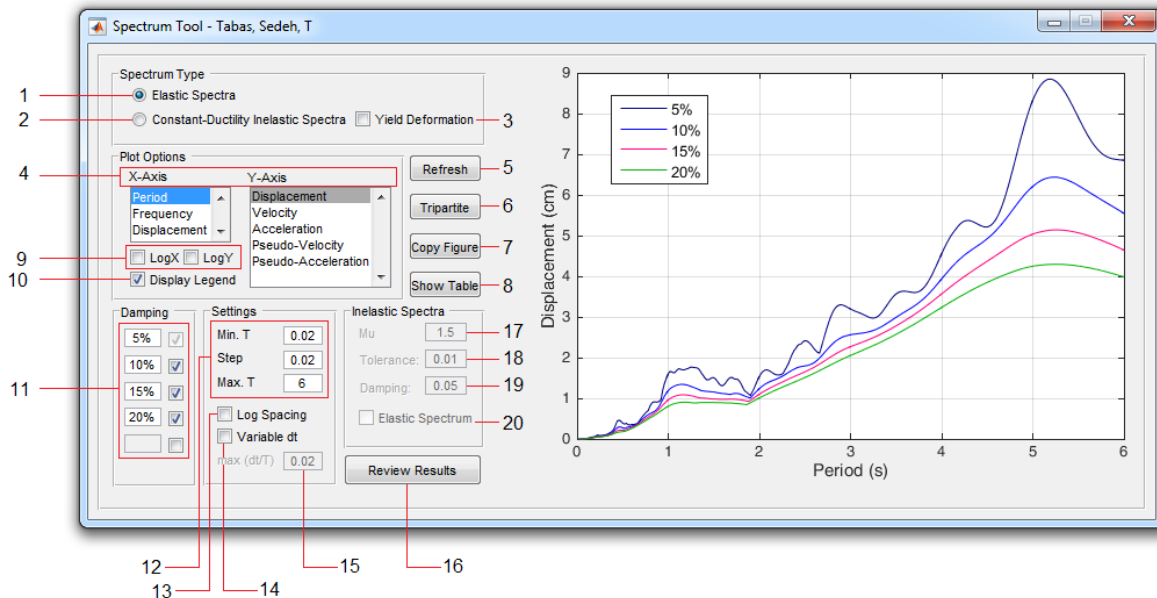

1. Select this option to calculate the elastic spectrum.
2. Enable this option to calculate the inelastic spectrum based on the maximum response value. (In this case PSA and PSV are not available)
3. Enable this checkbox to calculate the inelastic spectrum based on the yield value. (In this case SA and SV are not available)
4. Use these listboxes to change the X and Y axis for the chart.
5. After changing any settings, you may need to use this button to recalculate the response spectrums.
6. Use this button to display the Tripartite Plot.
7. Use this button to make a copy of the current axes in a new figure.
8. Use this button to display spectral data in a table. Table data will be automatically copied to the clipboard. (**Auto Copy** feature)
9. Enable these checkboxes to use logarithmic scale for the X and Y axis.
10. Use this checkbox to display the legend on the chart.
11. Use this section to enter (up to 5) Damping Ratios (%) for calculating elastic response spectra.
12. Enter the minimum, maximum and increment step size to determine the periods in which the spectrum values are calculated.
13. Enable this checkbox to use equal logarithmic spacing to determine the periods in which the spectrum values are calculated.

14. Enable the use of a variable time step.
15. Maximum value for the ratio of record Time Step to Period (dt/T)
16. Use this button to review the analysis results.
17. Ductility Factor for inelastic response spectrum.
18. Acceptable tolerance for the Ductility Factor convergence.
19. Damping Ratio for calculating inelastic response spectrum.
20. Enable this checkbox to add the elastic response spectrum to existing inelastic spectrum.


10.1 Review Elastic Spectra

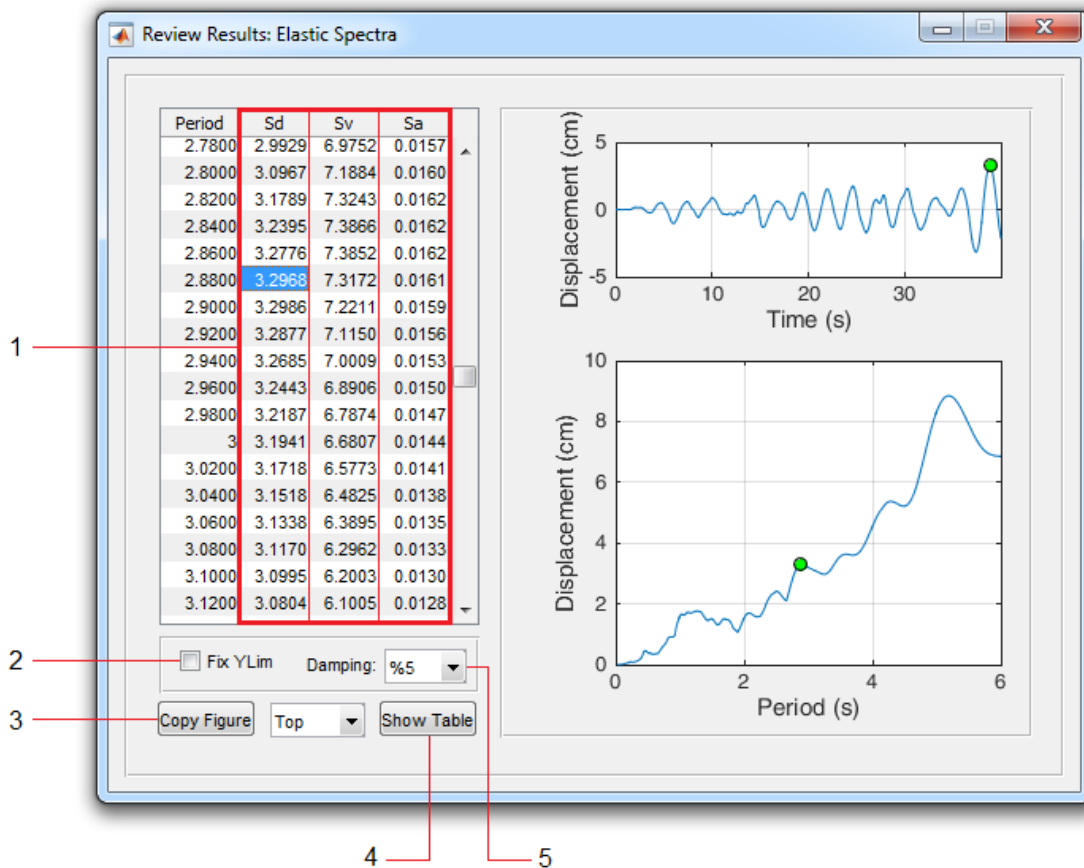

1. Select each column from this table ($S_d/S_v/S_a$) to plot its spectrum as well as the corresponding response time history.
2. Enable this checkbox to fix the Y-axis limit of the response time history plot.
3. Use this button to make a copy of each axes in a new figure. To select the desired axes, select Top or Bottom from the adjacent menu.


4. Use this option to display table data for the response spectrum or response time history (depending on the selection from the adjacent menu). Table data will be automatically copied to the clipboard. (**Auto Copy** feature)
5. Select the desired Damping Ratio from this list.

10.2 Review Inelastic Spectra

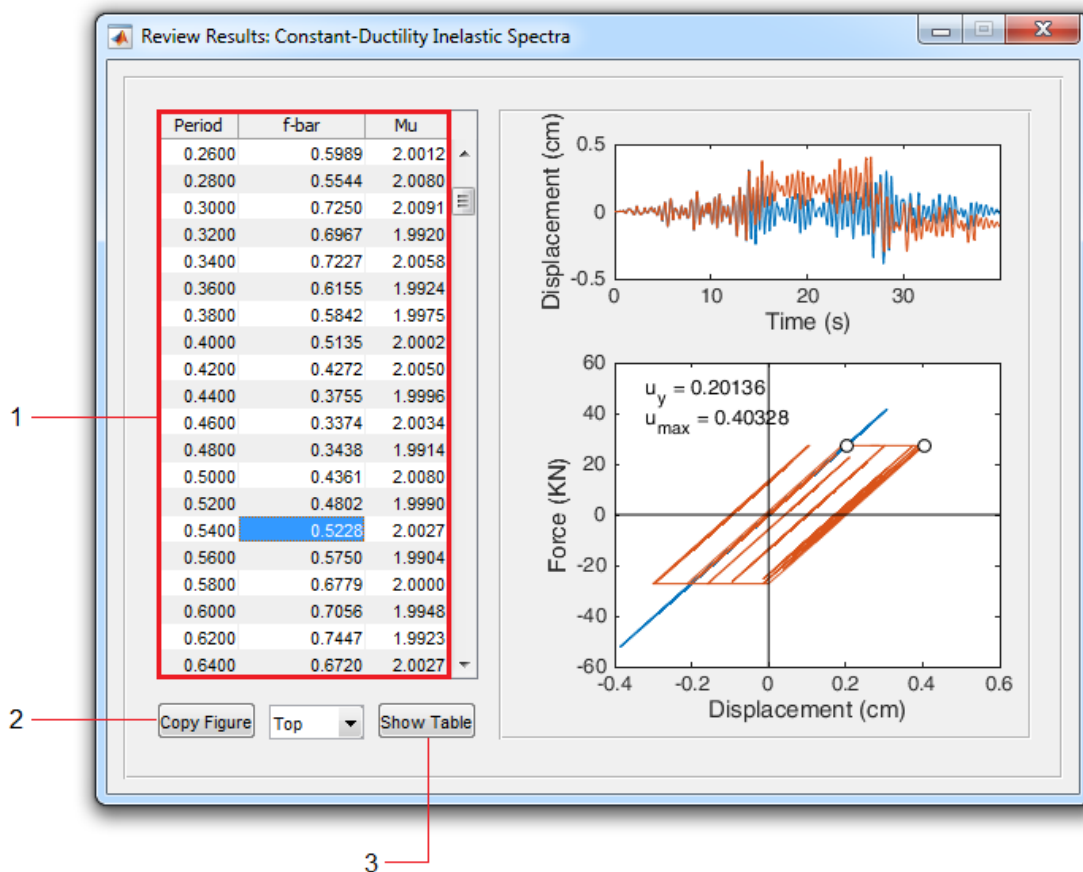


1. Select each row from this table to plot the response time history as well as the hysteresis loops (elastic and inelastic) for the selected period.
2. Use this button to make a copy of each axes in a new figure. To select the desired axes, select Top or Bottom from the adjacent menu.
3. Use this button to display table data for the response time history or inelastic hysteresis loop (depending on the selection from the adjacent menu). Table data will be automatically copied to the clipboard. (**Auto Copy** feature)


11. SDOF Tool

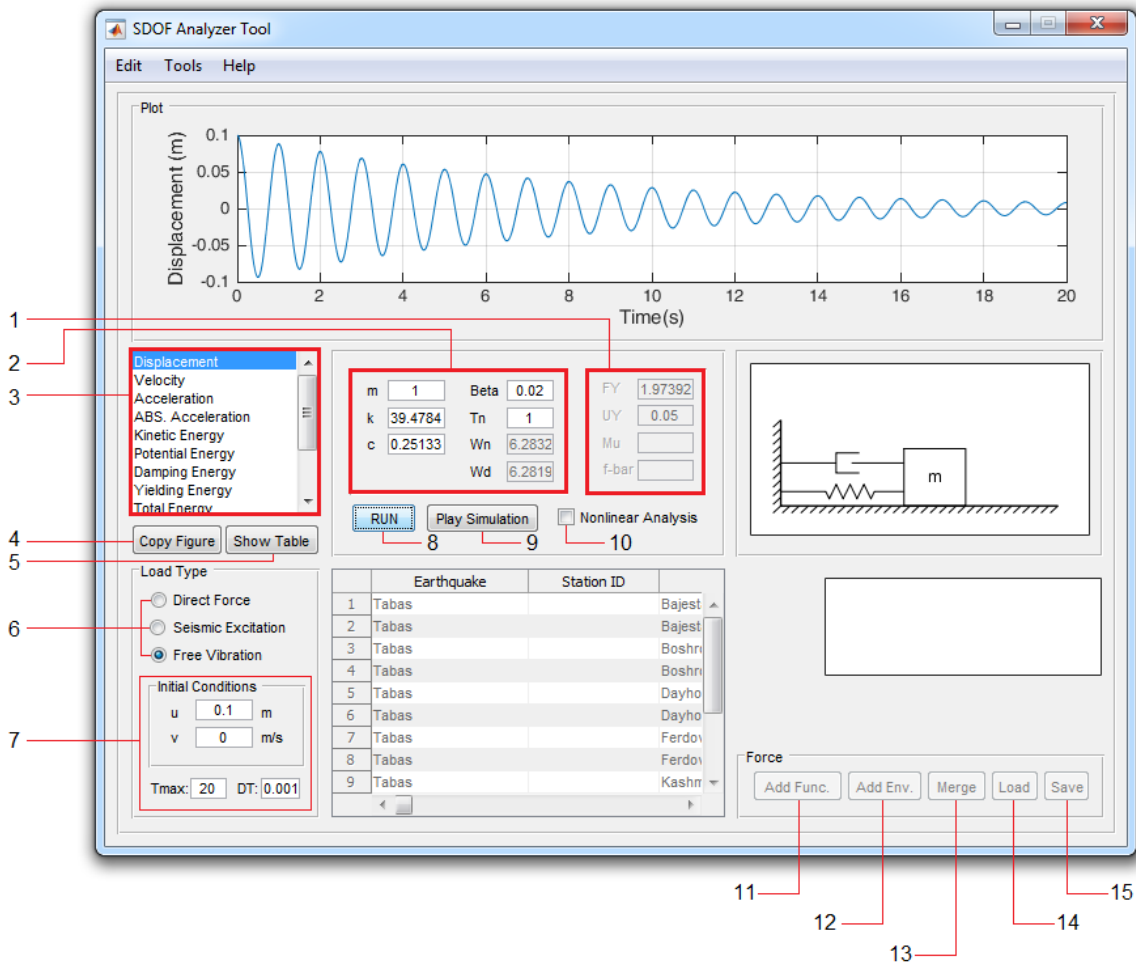



1. Specify the system's non-linear (elasto-plastic) behavior using one of the following methods:
 1. Enter the yield deformation (U_y) and the yield strength (F_y).
 2. Enter only the desired value for the ductility factor.
 3. Enter only the desired value for the normalized yield strength (\bar{f}_y).
2. The SDOF system specifications (mass, stiffness, damping coefficient - or ratio - and the period) can be entered here.
3. To display the system response, select the desired quantity from this list. By displaying each plot, its data will be automatically copied to the clipboard. (**Auto Copy** feature)
4. Use this button to make a copy of the response axes in a new figure.

5. Use this button to display the current response data in a table. By displaying the table, its data will be automatically copied to the clipboard. (**Auto Copy** feature)
6. Select the type of analysis. (forced vibration / seismic excitation / free vibration)
7. If the free vibration analysis mode is selected, the initial conditions, time step and maximum analysis time can be determined from this section.
8. Use this button to perform the analysis.
9. Use this button to watch the simulation of the vibration. (press Esc to cancel)
10. To perform nonlinear analysis, enable this option and specify nonlinear parameters as described in paragraph **1**.
11. Use this button to add a built-in function (harmonic, ramp or step) for forced vibration analysis mode.
12. Use this button to add an envelope to the existing function.
13. Use this option to merge two functions. (**Note:** They must have an identical time step)
14. Load function from a *.txt file
15. Save the current function to a *.txt file

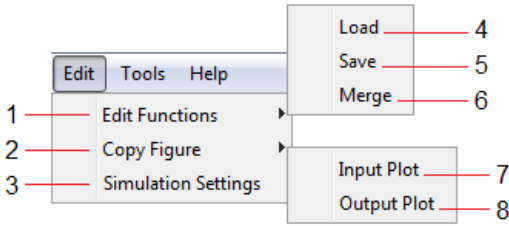Edit	
	
<ol style="list-style-type: none"> 1. Actions related to functions editing 2. Copy current axes to a new figure 3. Access to the simulation settings 	
Editing Functions	
<ol style="list-style-type: none"> 4. Load function from a file (*.txt) 5. Save current function to a file (*.txt) 6. Access to the Merge Tool (used to combine 2 functions) 	
Copy figure	
<ol style="list-style-type: none"> 7. Copy <u>input</u> axes (load function / earthquake time history) to a new figure 8. Copy <u>output</u> axes (response of the system) to a new figure 	

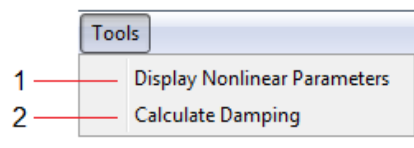
Tools	
<ol style="list-style-type: none"> 1. Display nonlinear parameters 2. Access to Damping Calculator Tool 	

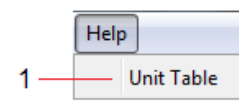Help	
<ol style="list-style-type: none"> 1. Display the units of used quantities in a table. 	

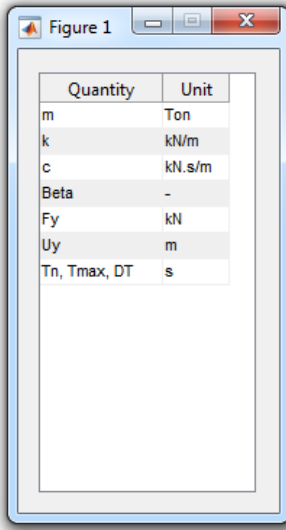

Quantity	Unit
m	Ton
k	kN/m
c	kN.s/m
Beta	-
Fy	kN
Uy	m
Tn, Tmax, DT	s

11.1 Damping Tool

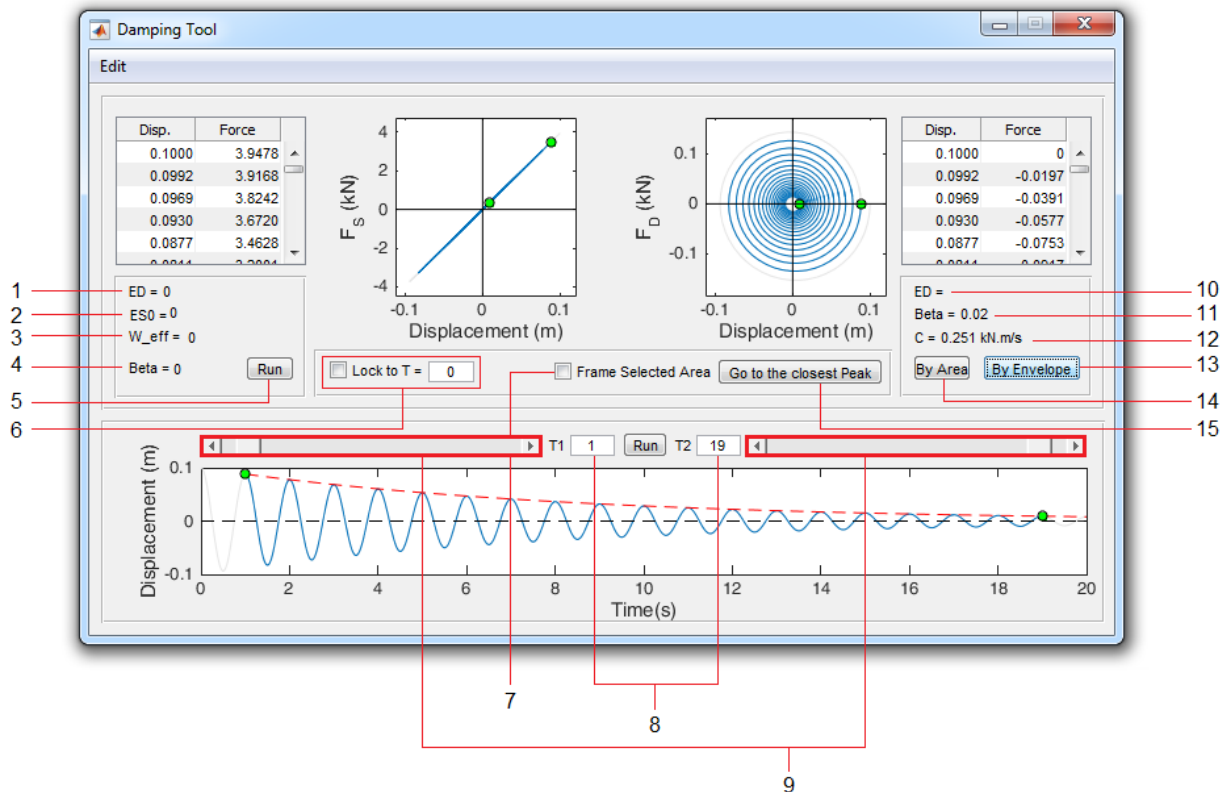

1. Dissipated Energy (energy loss)
2. Strain Energy
3. Effective frequency (frequency of the equivalent linear system)
4. Equivalent Viscous Damping Ratio
5. Use this button to calculate the Equivalent Viscous Damping for a nonlinear system. (**Note:** Before using, make sure to limit the calculation time range to one cycle of vibration using the checkbox **6**)
6. Use this option to limit the time range over which the damping calculation is performed.
7. When checkbox **6** is enabled, use this checkbox to display the limited area of the displacement response plot.
8. If checkbox **6** is disabled, you can enter the desired time range in these fields.
9. If checkbox **6** is disabled, you can change the desired time range using these sliders. If checkbox **6** is enabled, the sliders will move the desired range along the time axis, maintaining the selected duration.
10. Dissipated Energy
11. Damping Ratio

12. Damping Coefficient

13. Use this button to calculate damping using the free vibration analysis result. (Logarithmic Decrement Method)

(**Note:** Before using, make sure to use button **15** to limit the calculation time range to the peak-to-peak interval of a few cycles of the *free vibration* diagrams.)


14. Use this button to calculate damping using the forced vibration result.

(**Note:** Before using, make sure to limit the calculation time range to one cycle of the vibration using checkbox **6**)

15. Use this option to move the start and end of the calculation time range to the nearest adjacent peak.

Edit	
Copy Figure	
<ol style="list-style-type: none"> 1. Displacement-Spring Force diagram 2. Displacement-Damper Force diagram 3. Time history of Displacement response 	


11.2 Add Function

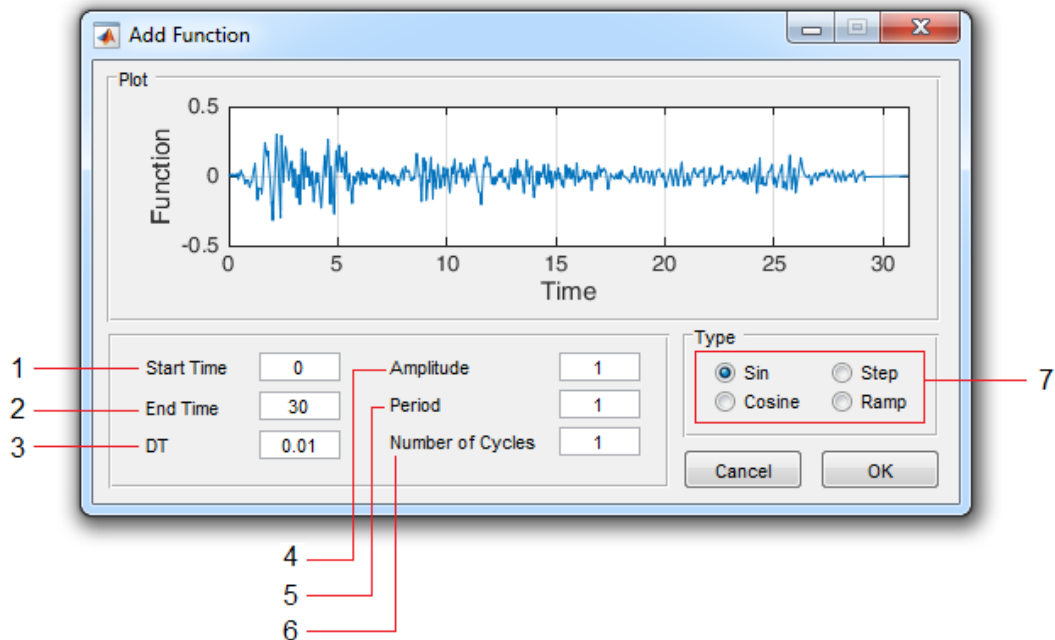


1. Function's start time
2. Function's end time (duration)
3. Time step
4. Maximum Function Value (Amplitude)
5. Period (for harmonic functions)
6. Number of cycles (for harmonic functions)
7. Select type of the function from this section.

Note: For the step function, textbox 6 is disabled and textbox 5 specifies the step duration.

Note: For the ramp function, textbox 5 specifies the ramp duration and textbox 6 is the duration of the constant section before the load fall to zero.

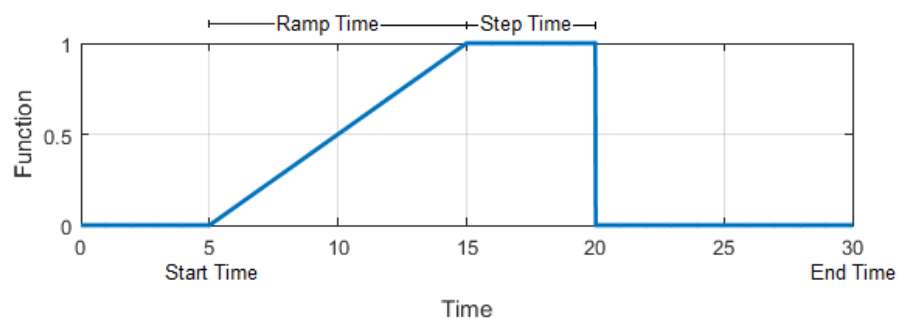


11.3 Merge Functions

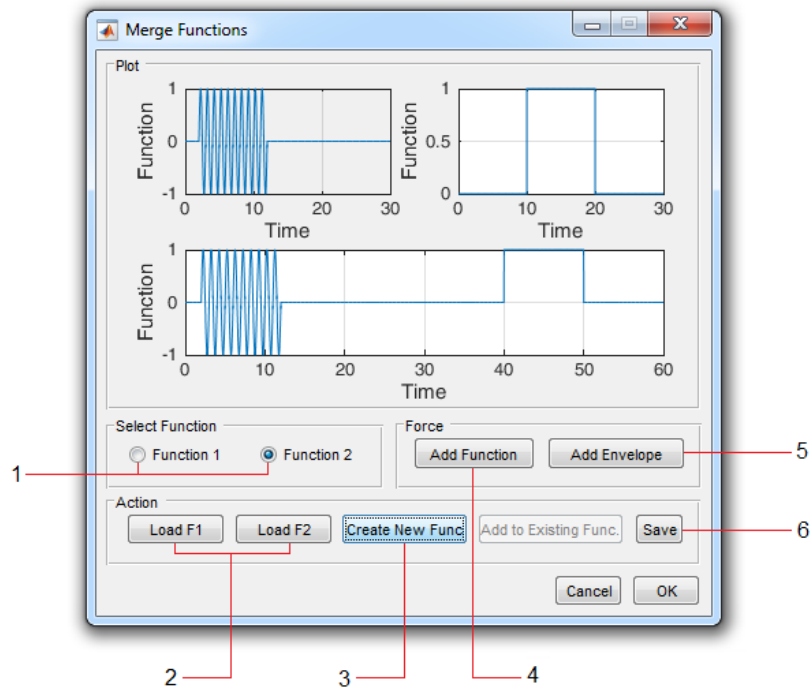


1. To add a built-in function, select the current function (1 or 2) from here.
2. Use these buttons Load the first or second function from a *.txt file.
3. Use this button to combine the first and second functions. (**Note:** functions must have an identical time step)
4. Use this button to add a built-in function. (harmonic / ramp / step).
5. Use this button to add an envelope to the current function.
6. Use this button to save the created function.

11.4 Add Envelope

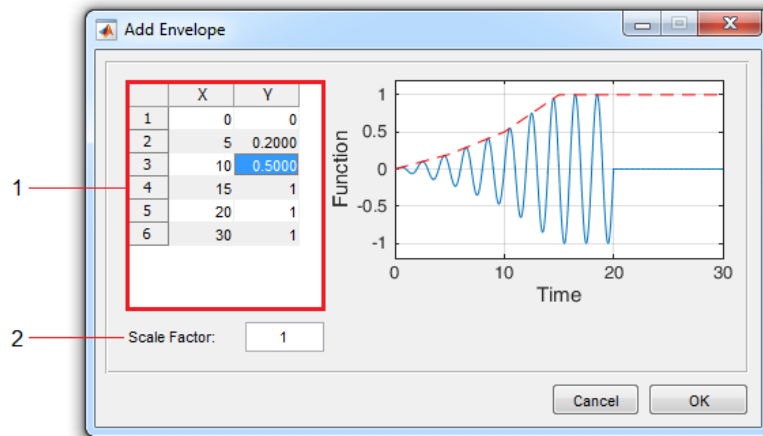


1. Use this table to edit the X and Y values for the envelope function.
2. Use this option to assign a specified number to all Y values.

12. Edit Table Data

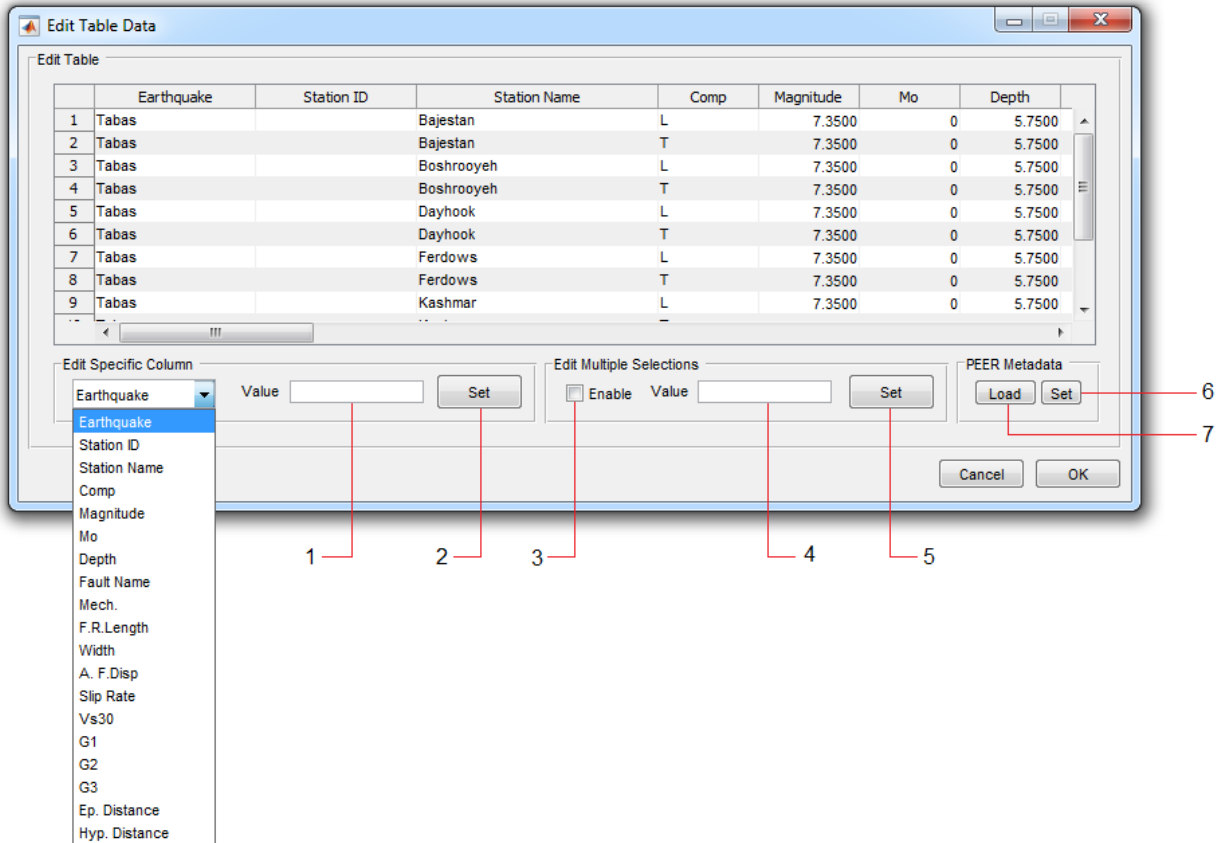


1. To change all values for a certain column of the table, select the name of column from the adjacent menu and enter the value in this textbox.
2. Use this button to assign the value entered in textbox **1** to the selected column.
3. To edit multiple cells of the table, enable this option and select the desired cells.
4. Enter the value you want to be replaced in the selected cells, in this textbox.
5. Use this button to assign the value entered in textbox **4** to the selected cells.
6. For the records taken from the PEER website, you can automatically get the information from the FlatFile. To do this, you need to load the FlatFile using this button.
7. When the FlatFile is loaded, you can use this button to automatically replace the available information into the database. (**Note:** SMDA searches the FlatFile by the earthquake name, record's station, and the component. If you have changed these values, the application will not be able to find the record from the FlatFile.)

13. Duration & Trim Tool

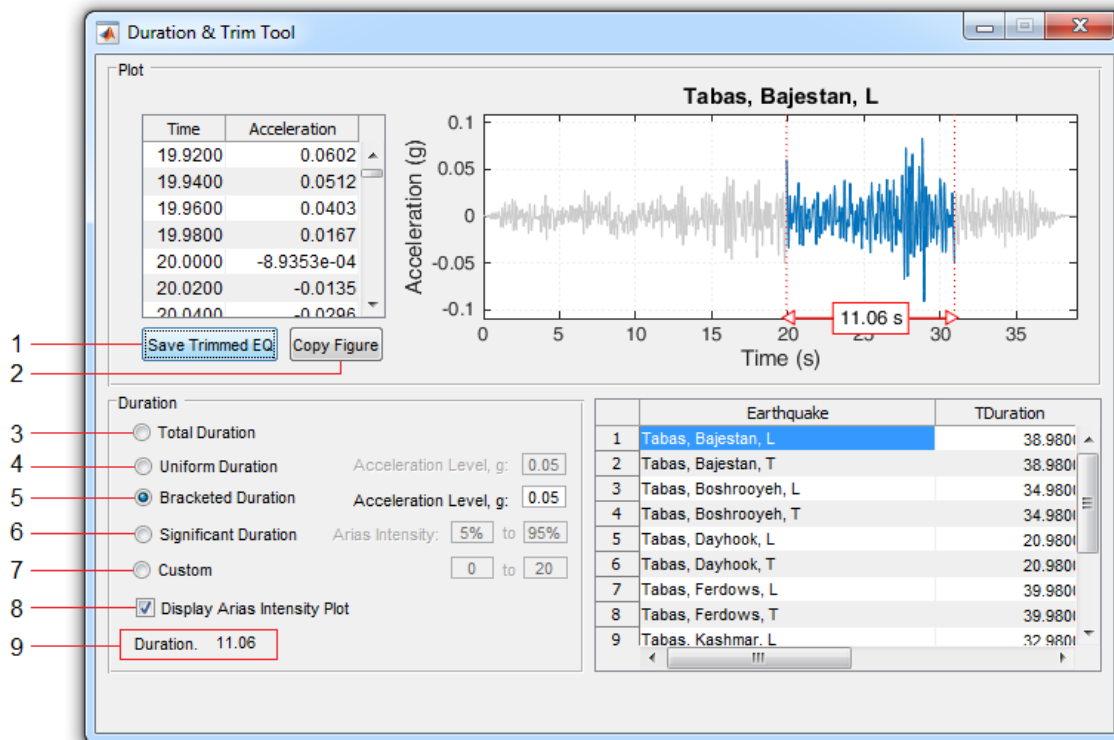

1. Save the Trimmed Record to a *.txt file.
2. Use this button to make a copy of the current axes in a new figure.
3. Display Total Duration for the selected record (on the plot and in the textbox **9**.)
4. Display the Uniform Duration for the selected record.
5. Display the Bracketed Duration for the selected record.
6. Display the Significant Duration for the selected record.
7. This option allows specifying a custom range for trimming the records.
8. If this checkbox is enabled, the Arias Intensity plot will be displayed after calculating the Significant Duration.
9. The calculated duration is displayed in this textbox.

14. MCR Settings

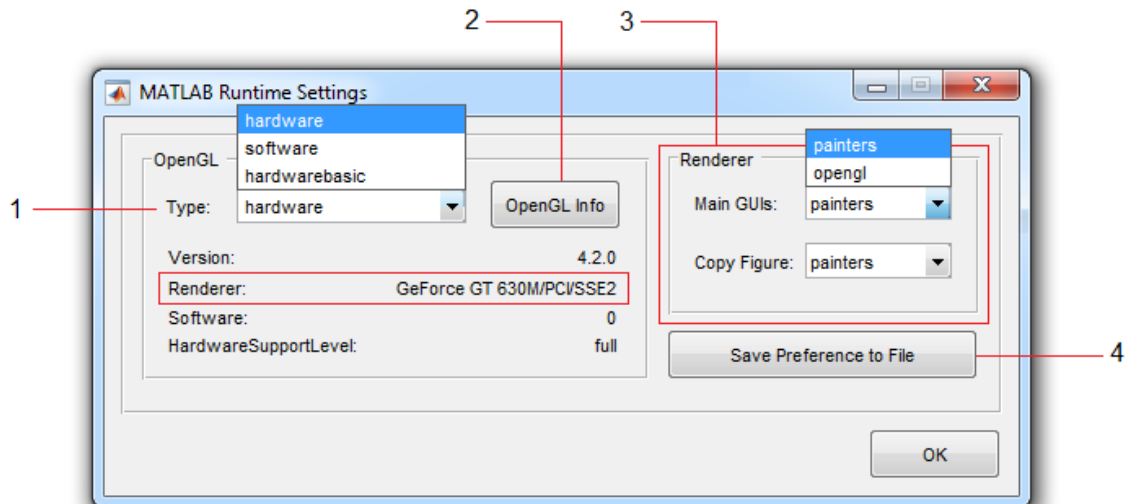

1. Select OpenGL Type. By default, *hardware* is used. If the graphics card driver is not updated there will be some graphic issues. In this case, switch to *software* OpenGL for the current session.
2. Display information about the OpenGL® implementation currently in use by the software, such as the version, renderer, and other features. If you don't see your graphics card in the renderer field, you will need to change the preferred graphics processor for the software. (See: [MCR Settings](#) for more information)
3. Select Default renderer for: Main software's GUIs as well as the Copied Figures.
4. Save current settings to an output file (which will be used next time when the software launches)

Note: if there is graphics card driver issue, you can launch program with the *software* version of OpenGL. You just need to download the preferences file (pref.xml) from the website and place it into the installation folder.

SEISMOGRAPH

earthquake engineering software